


## Troubleshooter

1. Connect CR to PC using USB cable
2. Download latest version of configuration software from here:  
<http://vp-systems.eu/support.html>
3. Run the software. If update window will pop up, choose Yes. Wait until CR will be updated. Green OK message should appear to bottom of status bar.
4. Configure CR according to screenshot:

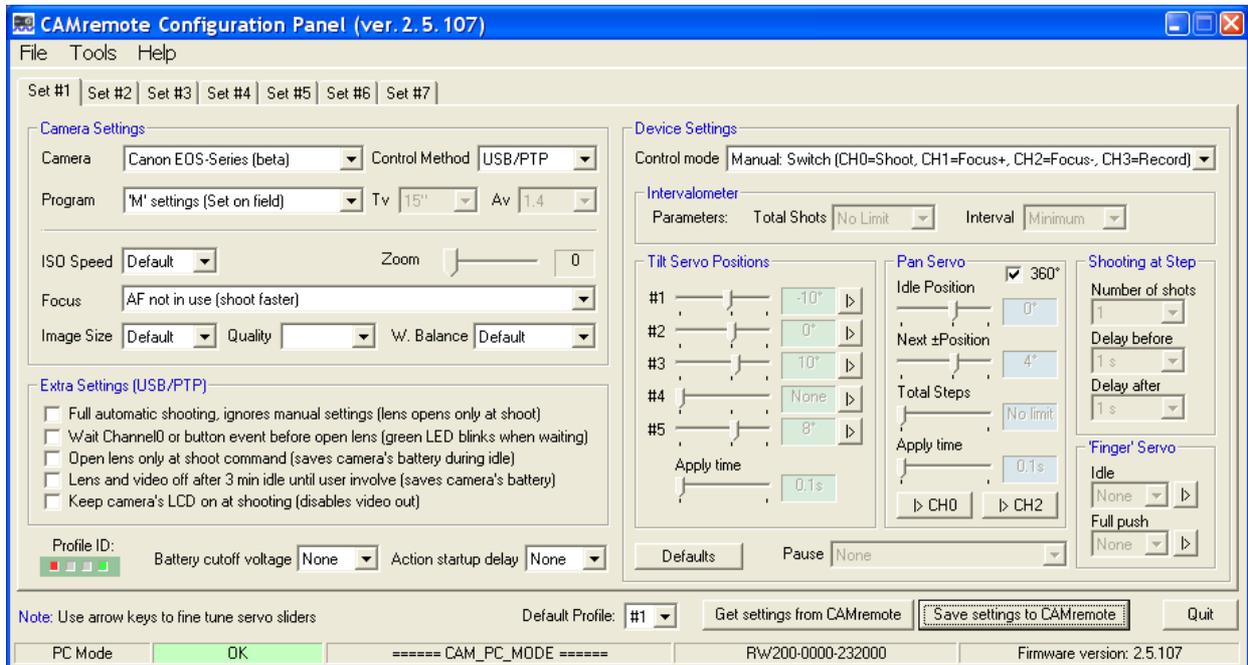

5. Save the setting by clicking 'Save Settings...' button
6. Remove USB cable from PC. Power up the CR through PWR terminal. LED#1 (red) and LED#4 (green) starts to blink about 4 sec. After that only LED#1 (red) blinks about 1 sec interval.
7. Turn on your camera and set Dial position to Movie or to 'MANUAL' if there is no 'Movie' selection.
8. Connect CR to USB port of the camera. At this moment LEDs #1-#3 starts to blink sequentially until LED#1 (red) and LED#4 (green) go on (no blinking anymore).
9. Text about lens may appear to LCD of the camera. Press on liveview button to get rid of that message.
10. Shutter release test: short pins (-) and (S) on CH0 using 3-pin cable (use 1 wire only so that plugs at both ends of same wire is connected to pins). Green LED start to blink and camera should take a picture. You can release shutter also by holding down blue onboard button on CR about 5 sec until you hear shutter release sound on camera.
11. Video recording test: short pins (-) and (S) on CH3 using 3-pin cable (use 1 wire only so that plugs at both ends of same wire is connected to pins). Green LED start to blink 1-2 sec and video recording should start, recording sign should appear to LCD of the camera.
12. Stop video recording by shorting again pins (-) and (S) on CH3. Green LED start to blink 1-2 sec and record sign disappear on LCD.

If something fails please let us know at what step by sending an email to: [support@vp-systems.eu](mailto:support@vp-systems.eu)

Thank you!